



www.dgt.ba

 **ReteHUB**

The logo for ReteHUB, featuring a blue square with a white grid pattern to the left of the text 'ReteHUB' in a blue, sans-serif font.

Your Smart Office



USER MANUAL

55"/65"/75"/85"

DGT ReteHub Business - Interactive Board

Please read this manual carefully before operation.
Retain it for future reference.

TABLE OF CONTENTS

Safety instructions-----	1
Accessories-----	2
Controls and connections-----	3
Remote Control-----	5
System description-----	6
System home page-----	6
Sidebar-----	6
Status bar-----	23
System settings-----	23
Software Documentation-----	30
Whiteboard-----	30
Finder-----	46
Welcome-----	50
Browser-----	53
Keeper-----	54
Screen share-----	57
Cloud driver-----	58
Theme-----	59
Drawing board-----	59

1. Safety instructions

Welcome

Congratulations! You now own one of the most state of the art and technologically advanced high definition Television products available. In order to make set-up as easy as possible, we would like to familiarize you with the features and functions of this special product. Please read this user's manual carefully and thoroughly and keep in a safe place for future reference.

We thank you for your business and hope you enjoy this product.

Caution

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This symbol is intended to alert the user to the presence of uninsurable "dangerous Voltage" within the Product's enclosure that may be of

Sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the

Literature accompanying the appliance.

CAUTION

-TO PREVENT DAIMAGE WHICH MAY RESULT IN FIRE OR SHOCK HAZARD
-DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
-SHOCK HAZARD DO NOT OPEN

CAUTION

These servicing instructions are Use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instruction unless you are qualified to

CAUTION

The stand intended for use only with this TV. Use with other apparatus is capable of resulting in instability causing possible injury.

WARNING

-Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
-This is Class B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.
To reduce the risk of fire and electric shock, do not expose this product to rain moisture.

WARNING

-Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
-This is Class B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.
To reduce the risk of fire and electric shock, do not expose this product to rain moisture.

FCC NOTICE

This device has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in home environment as well as in a commercial, industrial or business environment. This equipment can generate, use and radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on circuit's different form that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or Modification not expressly approved by the party for compliance could void the user's authority to operate the equipment.
Connecting of peripherals requires the use of grounded shielded signal cables.

Important Safety Precautions

Always be careful when using your television. To reduce the risk of fire, electrical shocks, and other injuries, keep these safety precautions in mind when installing, using, and maintaining your Television.

- λ Read these instructions and keep them in a safe place.
- λ Heed all warnings.
- λ Follow all instructions.
- λ Do not use this apparatus near water.
- λ Do not block any of the ventilation openings.
- λ Install it in accordance with the manufacturer's instructions.
- λ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- λ Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- λ Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the Television.
- λ Only use the attachments/accessories specified by the manufacturer.
- λ Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the Television. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- λ Unplug this Television during lightning storms or when unused for long periods of time.
- λ Refer all servicing to qualified service personnel. Servicing is required when the Television has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the Television has been exposed to rain or moisture, does not operate normally, or has been dropped.
- λ Clean only with a lint free cloth.



2. Accessories



User's Manual



Remote Control



 
Touch Pen



Power Cord


3. Controls and connections

3.1 Front view/side view



1. IR: Infrared sensor for the remote control.
2. ☀️: Increase or decrease the brightness of the screen.
3. USB: Connect a USB device here to play its media files.
4. HDMI: Digital signal input from HDMI video connector.
5. 🖱️: Touch screen mode.
6. USB: Connect a USB device here to play its media files.

 3.2 Rear View

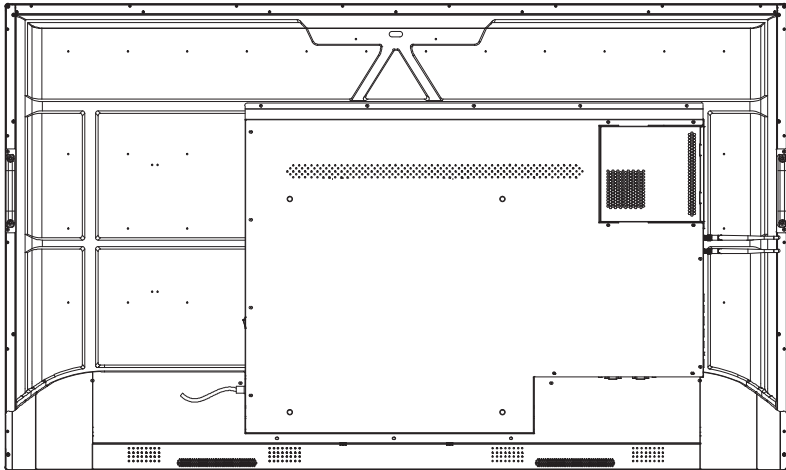

1. MICROPHONE

2. RS-232

Received Line Signal Detector.

3. OPTICAL

4. VGA input Jack

Connected to the VGA output jack on a personal computer.

5. PC Audio Input Jack

Connected to the audio output jack on a personal computer.

6. RJ45

Ethernet port for wired internet connection.

7. LINE OUT

Connected to the audio input jack of the audio device.

8. TOUCH

Connect to the writing pad.

9. HDMI Input Jack


Connecting for HDMI signal.


10. USB HOST

Connecting for USB device.


4. Remote Control





(): Press to turn the TV On/Off.


(): Press to mute the sound.

(): Press to select input source.


(/v/</>/OK): Press to move up/down/left or right or press to confirm.

(): Press to display the Home menu.

(): Press to return to the previous step.

(): Press to bring up the main menu to the screen.

(VOL +/-): Press to adjust the volume level.

(): Writing Whiteboard.

(OPS): Windows PC.

(HDMI): Press to select HDMI Mode.

Chapter 1 : System description

1.1 System home page

Enter the main interface by default after startup



- (1) No screen code is displayed at the top
- (2) There is an OPS entry in the lower left corner

1.2 Sidebar

1.2.1 Function introduction

The sidebar is divided into left and right sidebars. Click the icon



 
suspended on the left/right side of the screen to bring up the sidebar. The expanded function keys are home, back, task process, signal source menu, and small tools in sequence. WIFI, hotspot, Bluetooth, wired network, and brightness and volume progress bars.






1.2.2 Navigation bar


1. return

Click icon , return or exit the current program.

2. home page

Click icon , enter the main interface of the system.

 3. process

Click icon , enter the process management interface, and you can choose to enter or close the application.

(1) When there is no application process in the background, prompt "No windows available".



(2) When there are multiple application processes in the background, touch up and down in the process list area to view the application process.




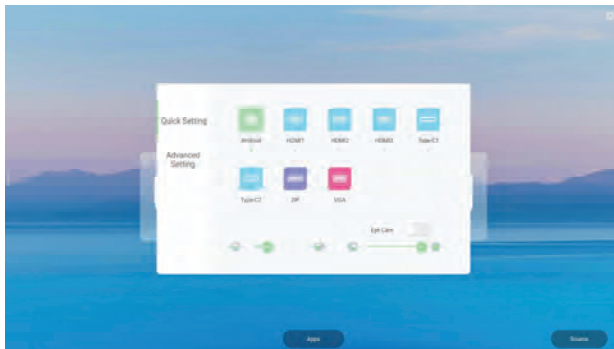 
(3) Touch and drag the process thumbnail to slide left or right until it slides out of the process list area. Release the thumbnail to close the application process.

(4) Click the process thumbnail to enter the application process.

(5) Click the X button to clean all the background.

4.menu

Click the  icon to enter the main screen of the menu.




1.2.3 shortcut


1. Whiteboard

 
Click icon , Enter whiteboard application, This is a shortcut.

2. Finder

Click icon , enter finder application, This is a shortcut.

3. More applications

Click icon , More application interfaces pop up, including operation guide, welcome interface, quick whiteboard (whiteboard writing), browser, tablet manager, Settings, file browsing, wireless screen transfer, cloud disk and theme and other system applications, these applications will be detailed in the second, software description, users can view or open the system application in this interface, as shown in the figure:

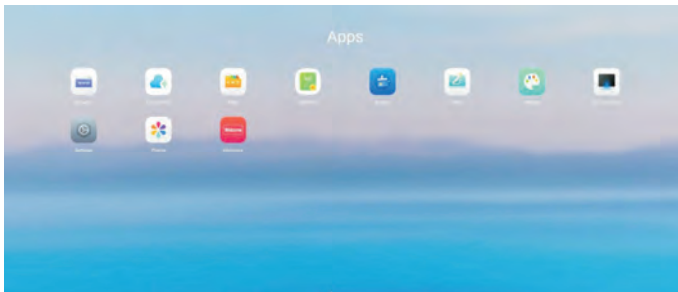


You can create a shortcut by touching and dragging the application icon to the sidebar, and dragging the application icon in the sidebar will prompt you to delete the shortcut. Click the prompt message to delete the application shortcut, which can be recreated.




1.2.4 annotation

The annotation mode can increase the user's reading experience. In this mode, the user can scribble and annotate freely in the interface according to the user's idea, so as to facilitate communication and explanation between users.

 
Click icon  (left or right) → click icon . You can enter the annotation mode.

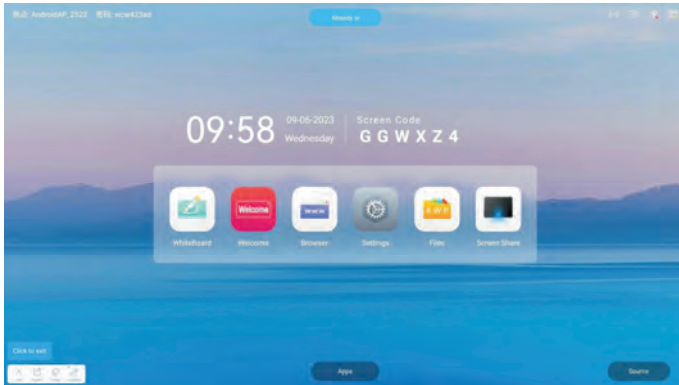


Function description:


a. Annotate : This function is used by default when entering annotation mode. click the icon again to select the thickness and color of the pen




b. Erase : Click the icon to select the erase function. At this time, the touch will have a circular eraser. When the eraser moves to the annotation writing content, it will erase the brush trace within the overlap range.



Click the icon again can call out  , clear all writing traces in the interface and return to the original state after do that.

c. export  : click the icon can save or share this annotation



When you click the  Save icon, the save selection bar is called up, and users can choose to save to local or cloud disk, also can customize the name of the annotation file (named by time by default), and click the save button to save it.





When you click the **Sharing** icon, a QR code will be generated (this function needs to be online to use). Users can scan the code to download the annotation file, and also share the annotation file by sharing the QR code, and have the file encryption function, which users can set according to their needs.



d. **exit**: Click the icon to exit the annotation mode. When there is unsaved content, you will be prompted whether to save it.

 


1.2.5 settings



Click the icon **Settings** to open the settings. There are two columns: Quick Setting and Advanced Setting.


The Quick setting interface can select signal source channel, eye protection mode, volume and brightness settings.

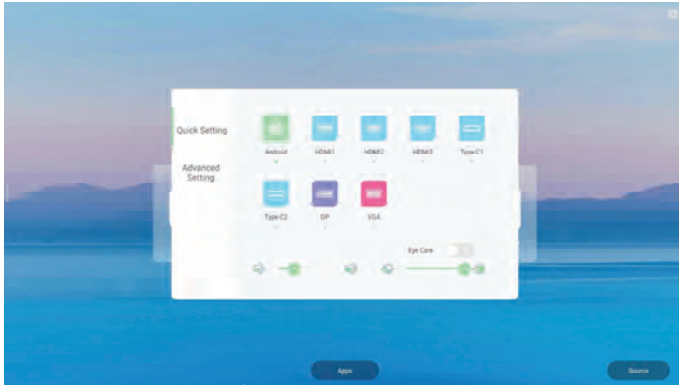

The Advanced Setting column is about our Audio, Screen, Display and Adjust. You can also select some specific scene modes, such as conference mode, classroom mode or custom mode.



1.2.6 more tools

Click icon  , the selection bar of more tools will open.



 
Click button "Edit" to sort or reset these tools by touching and dragging the tool icon. Click "+" in the upper right corner of the icon to add to the desktop, click button "Reset" to reset, and click button "Finish" to save the modification.



(1) Timer



Click the icon to enter the Timer function. Set the countdown time by touching and sliding. Click "Start" to start the countdown, and ring a reminder when it is over.

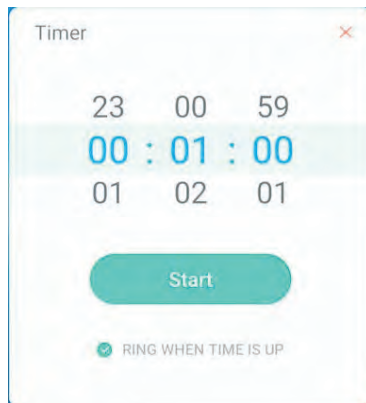



(2) Record




Click the icon to enter screen recording mode, move position by touching and

 dragging the popup









a. Click the icon  to set the resolution and path for saving the recording screen



b. Click the icon  to start screen recording after the countdown of 3 seconds




At this time, click the icon  to pause the recording. After pausing, click  again to continue the recording. Click  again to expand and change

 
. Click again to collapse . Click  to


end the recording and save. After saving, you will be prompted whether to open the file for viewing.





c. Click  to exit the screen recording tool.

(3) Stopwatch

 Click the icon  to enter the stopwatch tool, and click button “start” to start timing.

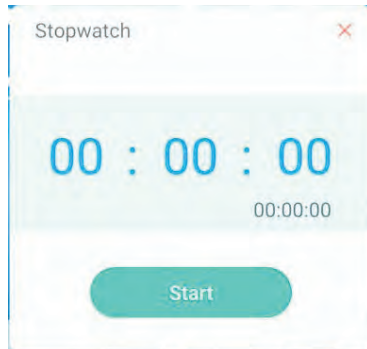


  You can pause the timing by click button “Pause” or count the number of times by click button “Lap” after starting the timing. You can continue the timing by click button “continue” or re-time by click button “reset” after pause.

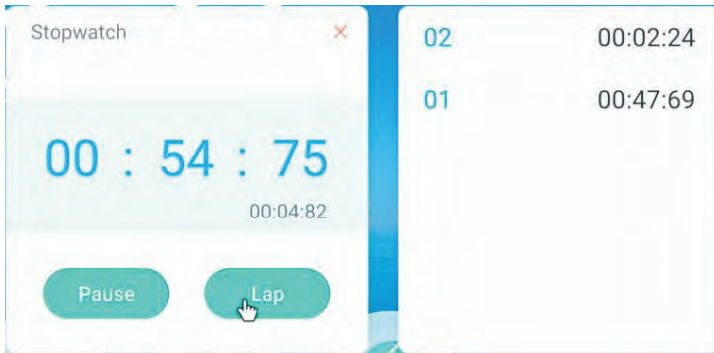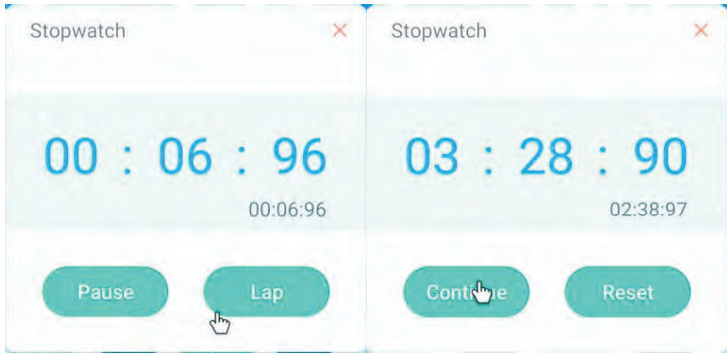

 (4) Freeze









After clicking the icon , the current interface will remain unchanged. You can zoom in or zoom out and drag to view the current interface.



(5) Crop

 






Click the icon  to enter the screenshot mode. Touch and drag the location and size of the screenshot box, and click  to save the screenshot (the saving path will be prompted for viewing), or click  to cancel the screenshot. Click  to box select the entire screen, click  again to restore the previous size, and click  to insert the screenshot into the shortcut whiteboard for editing.




(6) Split screen



Click the icon  to enter the split screen mode, and two applications can be displayed at the same time. The application that supports split screen mode will be

 prompted. Click  in   to close the application in the current area, and click  to exchange the areas displayed in the two application interfaces.

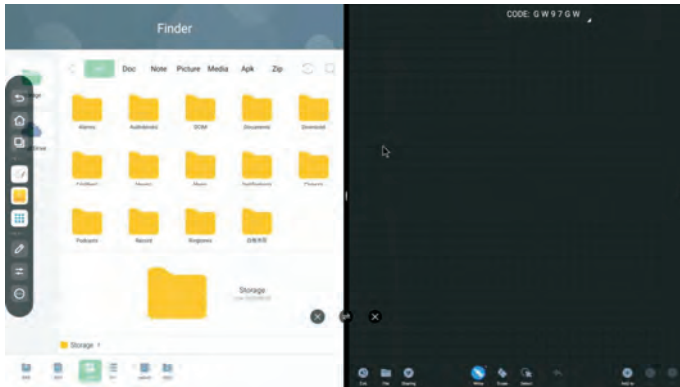

(7) camera




Click the icon to enter the camera mode and display the camera interface.

(8) Pollkit



 
Click the icon to enter the voting settings. In the quick mode, touch and drag the number to set the number of options. There are two functions to check: whether to be anonymous and whether to select multiple. After setting, the voting QR code can be generated, and the user can scan the code to vote. Advanced mode will generate QR code to set more options

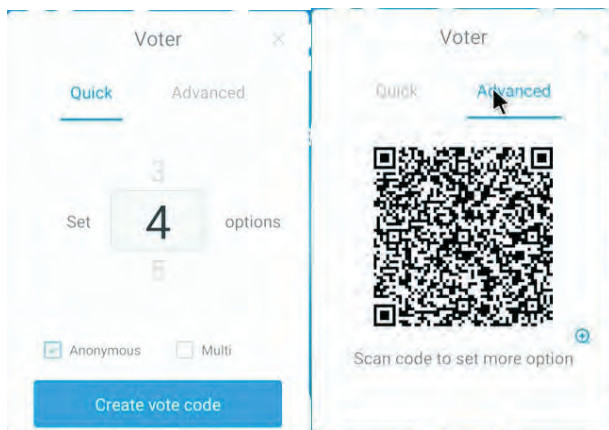

(9) Fast file transfer



 
Click the icon to open the file fast transfer tool, which will generate a QR code for users to scan and upload files.

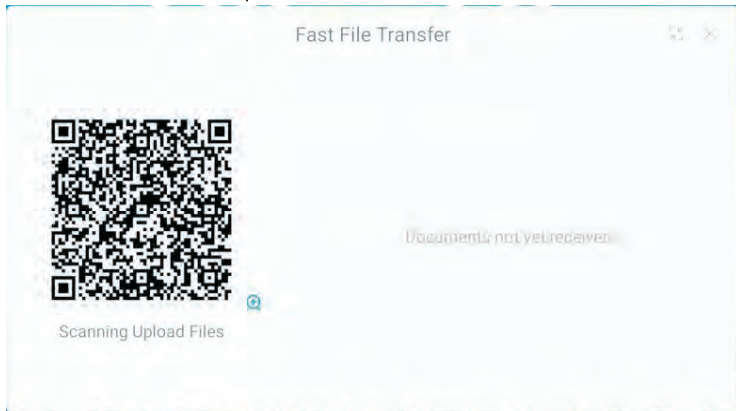

 
(10) Calendar



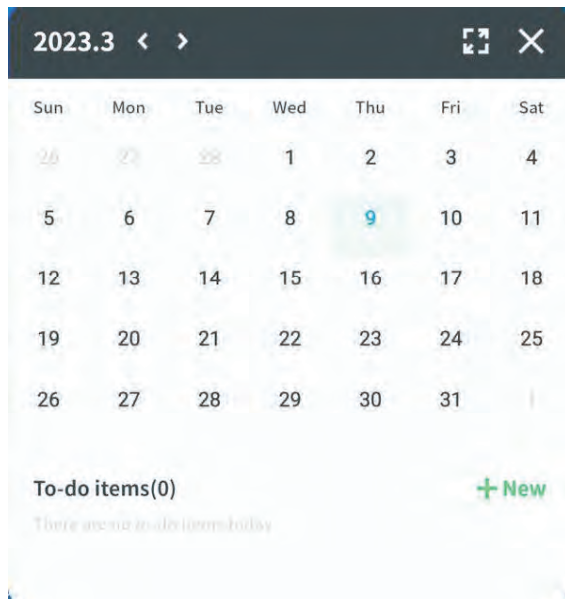


 Click the icon to enter the calendar tool to view the perpetual calendar

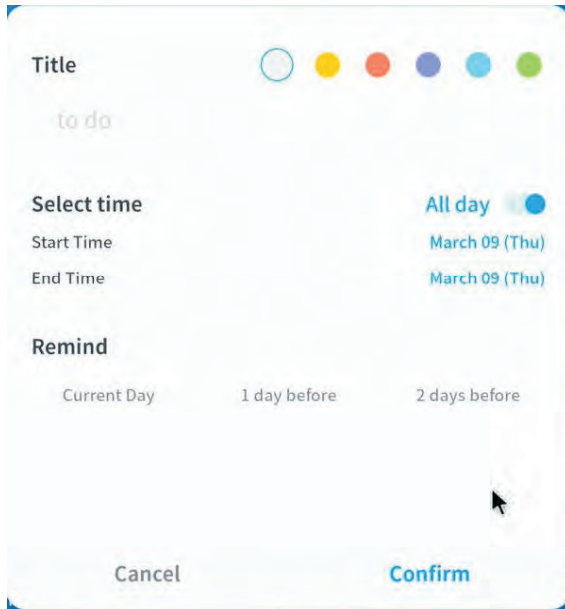


 You can also view and create new to-do items by click **+ New** . The time is set by touching and sliding the date.




(11) touchoverlay

 Click the icon  to enter the touch lock mode. Click the icon  in the lower left corner to lock. After locking, touch lock. At this time, touching other places is invalid. Click  again to restore touch. Note: This icon will be hidden automatically, and will be called out by clicking anywhere on the screen.

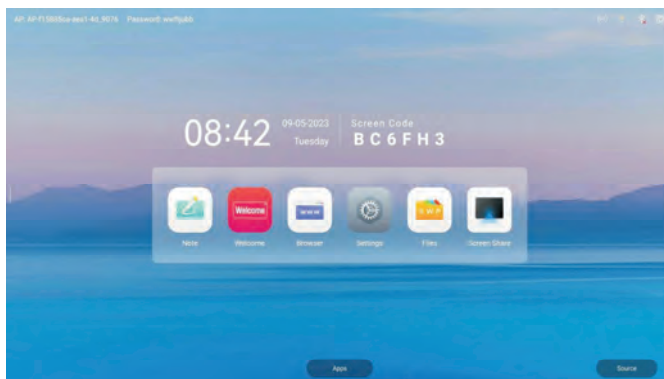


(12) ScreenLock



Click the icon  to lock the screen. You need to set the lock screen password. When you wake up the screen, you need to enter the lock screen password.

 (13) Calculator



Click the icon  to enter the calculator tool.

(14) Weather manager



Click the icon  You can check the weather, the weather in your area

(15) PIPpicture within picture




Click the icon  The picture-in-picture function can be opened





1.3 Status bar


The status bar is in the upper right corner of the main interface. Display the network status of the current machine. It can also be used as a shortcut for hotspot, Ethernet, wireless network (WIFI), and a screen code.



(1) click : Enter the hotspot setting interface. This icon can also indicate the hotspot switch status, which is currently turned on.

(2) click : Enter the Ethernet setting interface. This icon can also indicate the Ethernet connection status, which is not currently connected.

 
(3) click : Enter the WIFI setting interface. This icon can also indicate the WIFI connection status, which is currently connected.

(4) Click:  to enter the Bluetooth Settings interface, this icon can also indicate the Bluetooth connection status, currently not connected.


1.4 System settings

System settings mainly include wireless and network, personalization, input and output, system and other functions.


1.4.1 Wireless and network

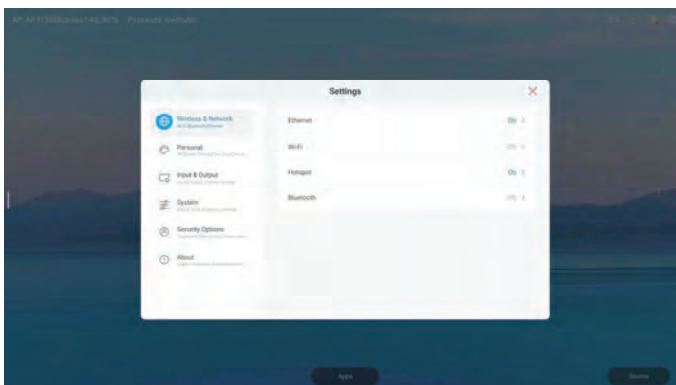

 
(1) Ethernet: set the Ethernet function on or off to automatically obtain IP address or manually set Ethernet information such as IP and gateway.

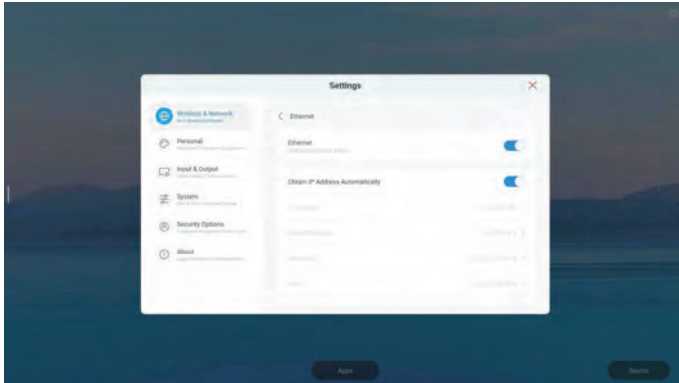

 
(2) Wi-Fi: Set the WIFI switch status. After it is turned on, the available network can be automatically obtained and displayed.

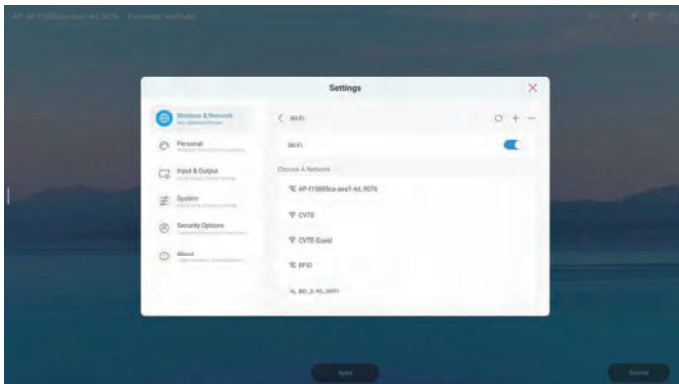

 
(3) Hotspot: set the hotspot on or off, and you can configure the hotspot name and password.

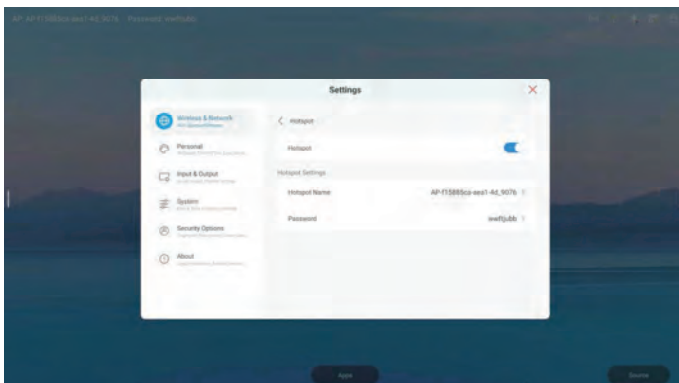

 
(4) Bluetooth: Set whether Bluetooth is visible to other devices, rename Bluetooth devices or view received files, and connect to devices in the list of available devices.

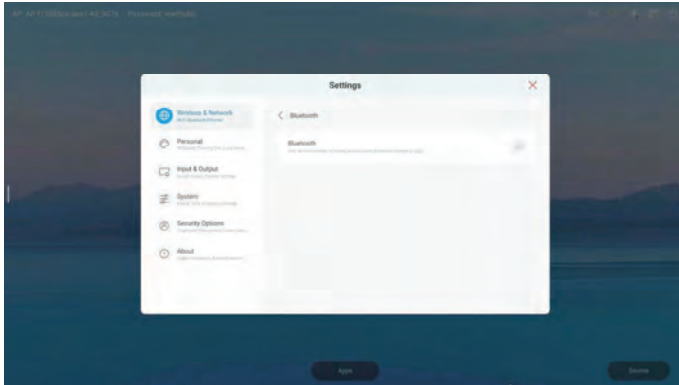

 
1.4.2 personal

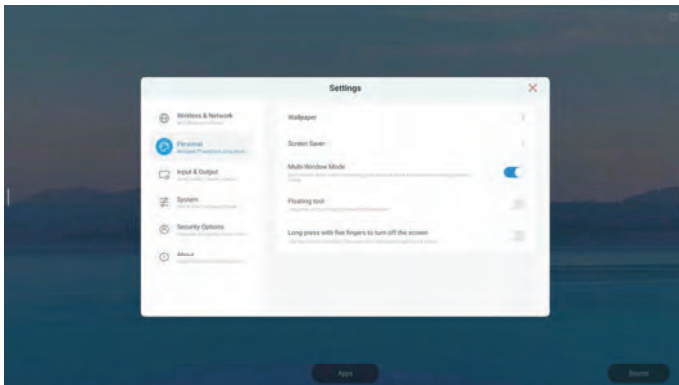

 (1) Wallpaper: static or dynamic wallpaper can be set, and custom wallpaper can also be added.

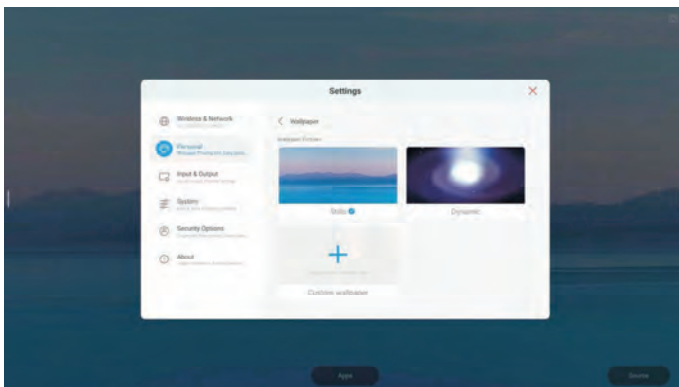


 
(2)Screen saver: you can set the default screen saver or add a custom screen saver picture.

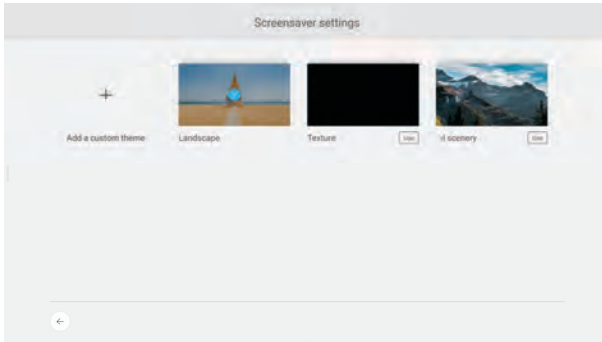

(3)Screen lock password: After setting the password, you need to enter the password to wake up the screen.


(4)Floating ball tool

  Two fingers call out the floating ball, can be a series of quick operations including home page, return, whiteboard, Settings, etc., can also be customized to add, as shown below

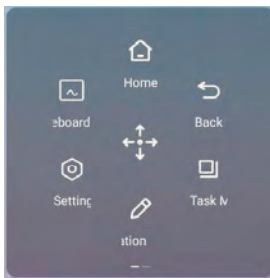

(5) Five-finger long press the screen: After setting the five-finger long press can turn off the screen or wake up the screen.

 1.4.3 input & output

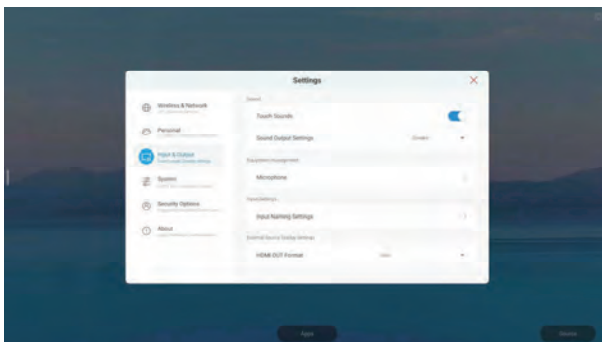


- (1) Sound:
 - a. Touch sound can be turned on or off
 - b. Set sound output: speaker, lineout, mixed
- (2) equipment management:
 - a. Turn on or off USB lock
 - b. Microphone
- (3) Input settings: Input channel alias can be set




- (4) External Source Display Settings: HDMI OUT format selectable 1080P_60Hz and 3840 × 2160_60Hz

 
1.4.4 system

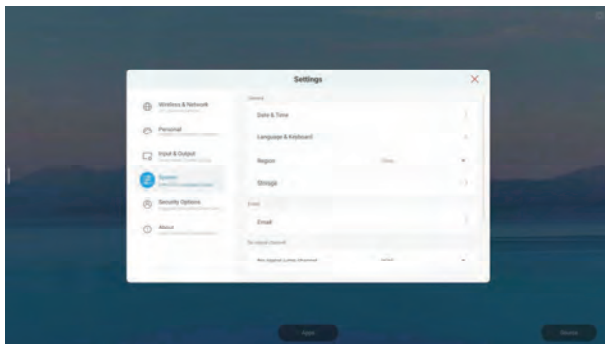

 - (1) Date & time: 12/24 hour system is optional, whether to use network time is optional, and date format and time zone can be set.

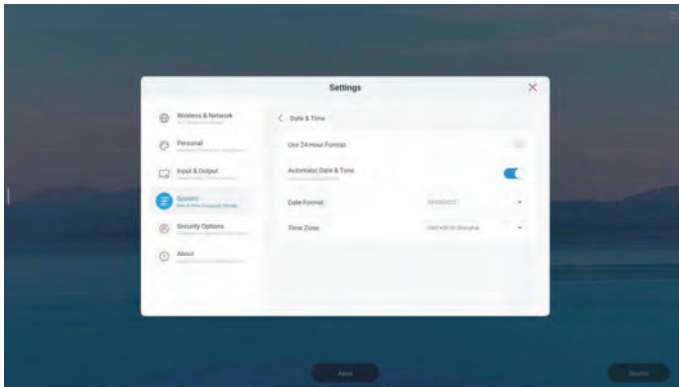


 (2) Language & keyboard: set system language, switch input method, virtual keyboard entity keyboard options.

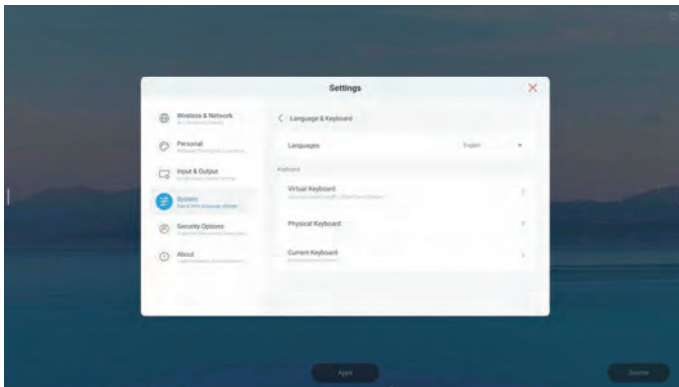


(3) region: Select the country and region to use.

 (4) storage: View internal storage usage and running memory usage.

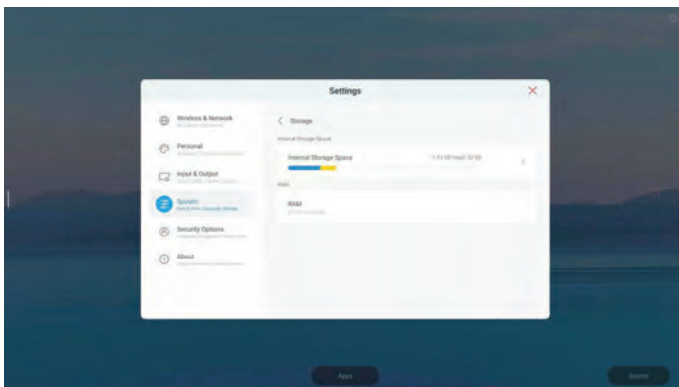

 
(5) Startup & shutdown: startup channel, scheduled startup/shutdown plan, shutdown prompt, screen saver time, sleep time, and screen saver display.

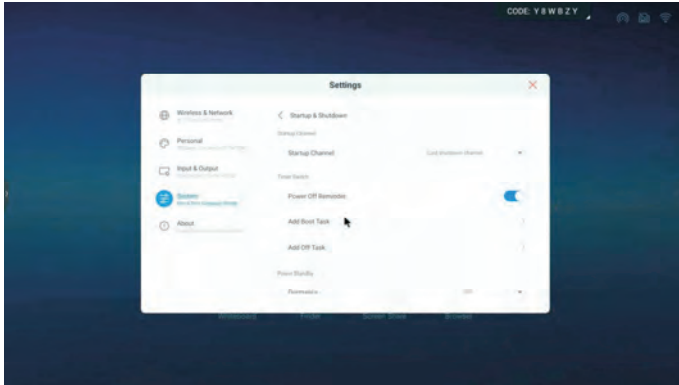

(6) system update: The latest upgrade package can be detected for upgrading.

(7) Reset factory: The data will be cleared and the factory settings will be restored.

 1.4.5 About

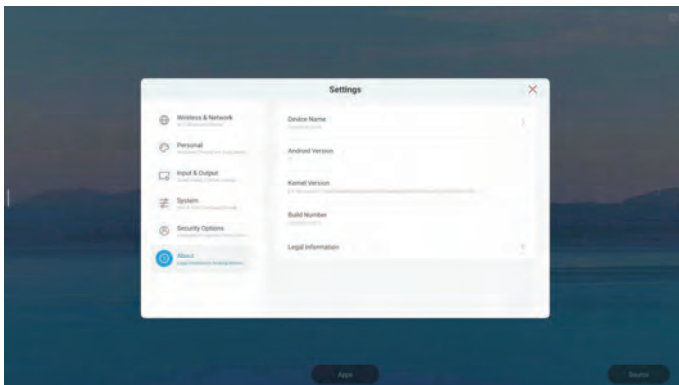


Chapter 2: Software Documentation

 
2.1 whiteboard

2.1.1 Enter whiteboard


There are two ways to enter the whiteboard:


(1) Click icon  to enter the whiteboard writing application from the main interface.

(2) Click icon  —>click icon , enter whiteboard writing application

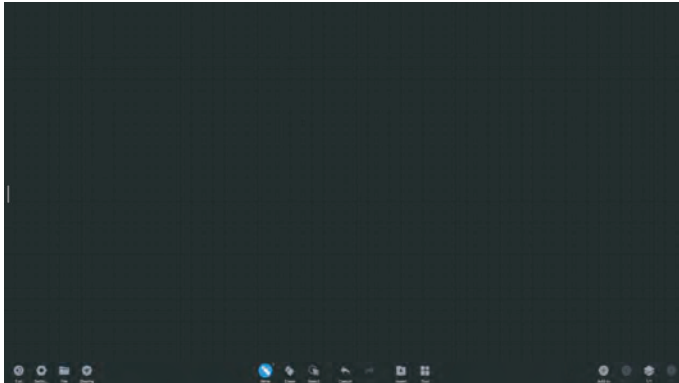


2.1.2 Settings

 Click the icon  in the lower left corner to call up the setting bar.

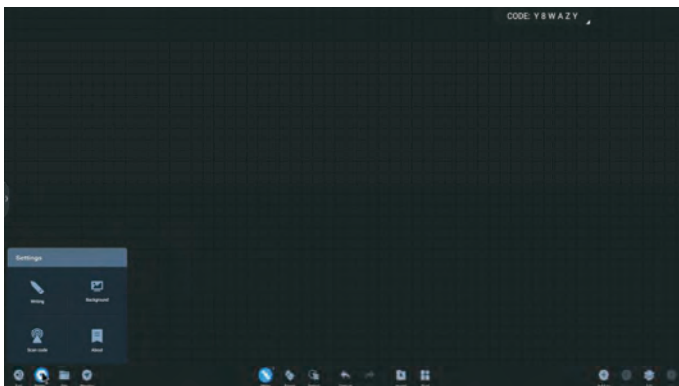




 - writing: Click the icon **Writing** to turn on and off multi-person writing (lock zoom function after turning on), Write and erase (after opening, you can write and gesture to erase), double-color pen writing, and chart drawing (directly draw tables and graphs after turning on).

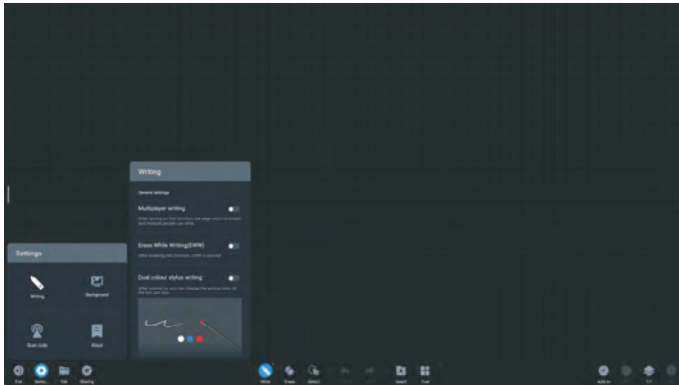 



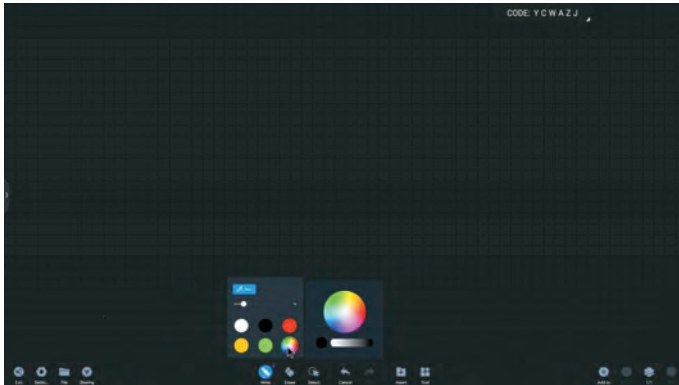 
- a. background: Click the icon **Background** to set the whiteboard background and format, and upload a customized background image.

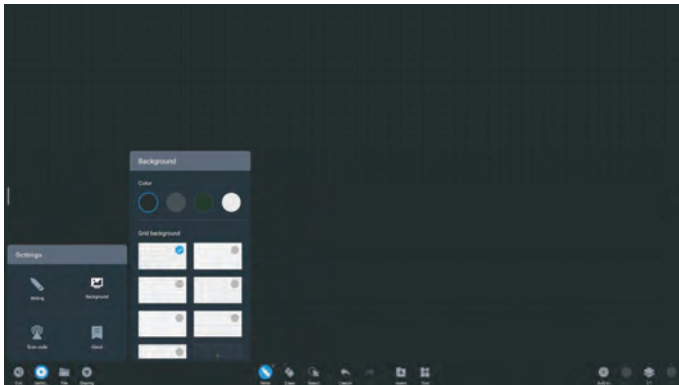



- b. Scan code: Click the icon **Scan code** to set the network, public network or LAN


2.1.3 Basic functions

 (1) write: Click the icon  to enter the brush function, touch to write, click again to set the brush thickness and color, and click  to customize the brush color.




 
(2) erase: Click the icon , and touch erase by default. Click the icon again to select the circle erase or slide clear function. Circle erase, that is, the contents in the circle will be cleared, and slide clear to the right to clear the contents of the current whiteboard page.

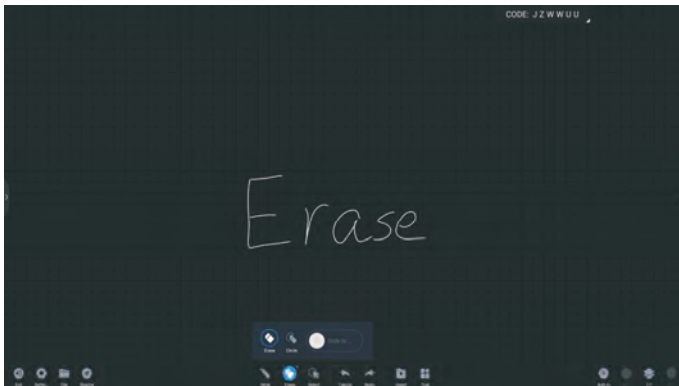



(3) select: Click the icon  to enter the selection mode, and touch to circle the contents of the whiteboard

   
It can intelligently select the entire content in the circle, move, rotate, copy and delete the selected content, and move to other pages

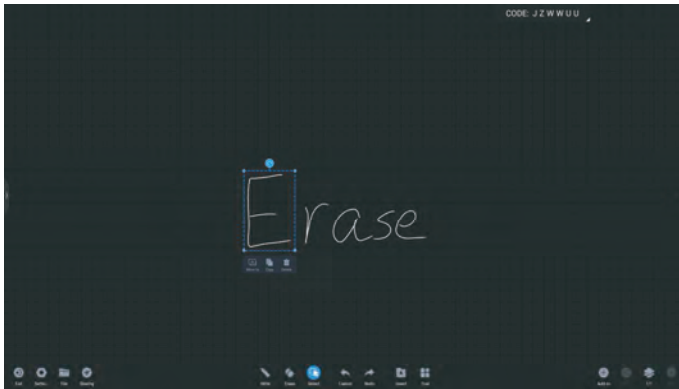


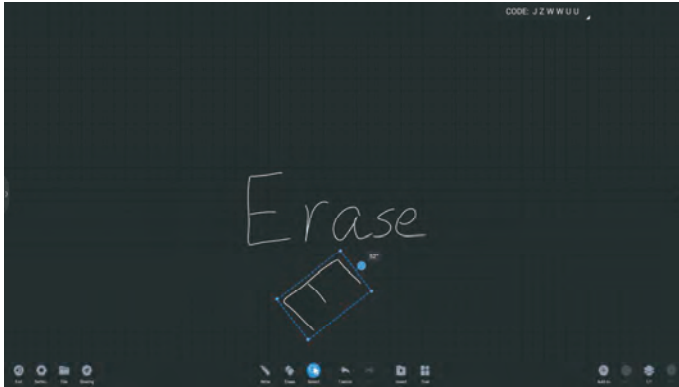 
Click the icon  to move the selected content to another page

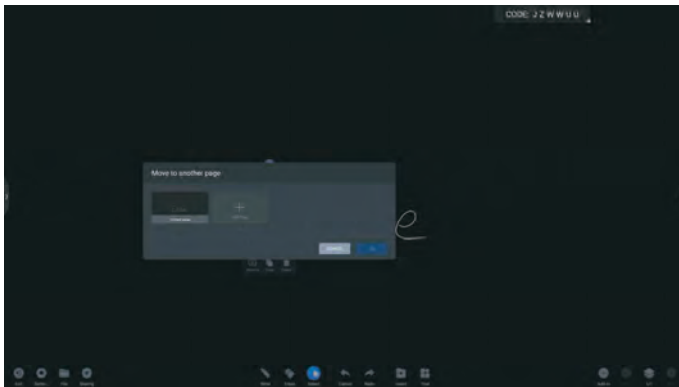



Click the icon  to copy and paste the selected content on the current page

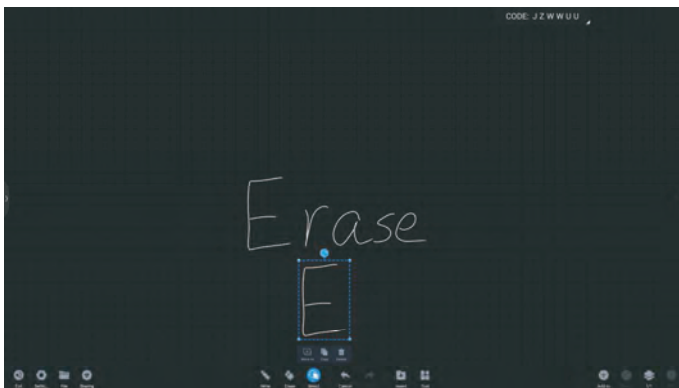


Drag anywhere in the selected box to move the selected content, and touch the drag icon  to move the content in the entire box




 Click the icon  to clear the selected content.


(4) cancel & redo: Click the icon  to undo the previous operation, and click the icon  to restore (redo) the latest undone operation.

 
2.1.4 Common tools

 
(1) Insert: Click the icon  to call up the insertion selection bar

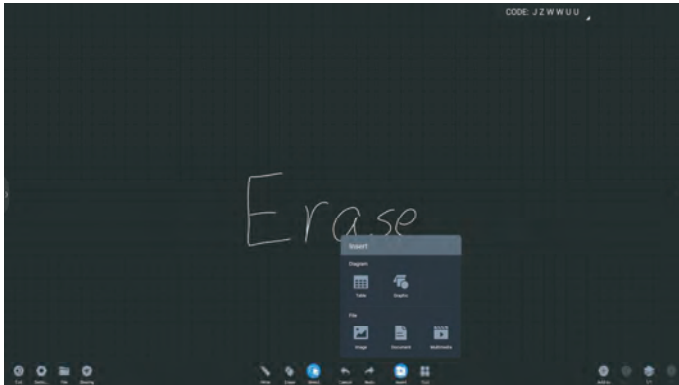




 a. table

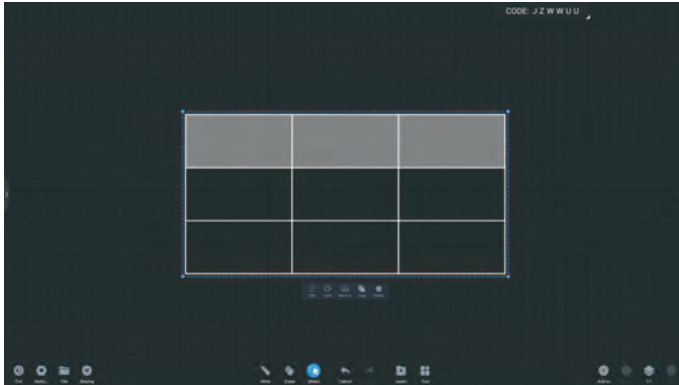
Click the icon  to insert a table in the center of the page. At this time, touch and drag any position in the table to move the table, and touch and drag the small dots at four corners to control the table size.

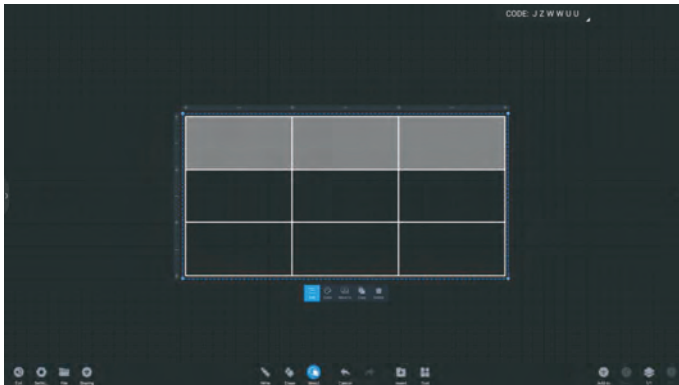 

 
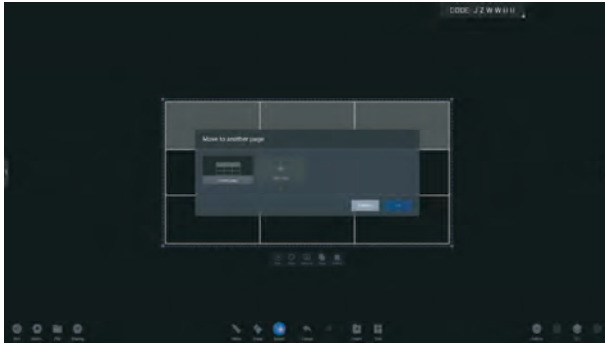 
Click the icon  to edit table rows and columns, click "+" or "-" in the upper area to add or delete columns at the location, and click "+" or "-" in the left area to add or delete rows at the location of the row.




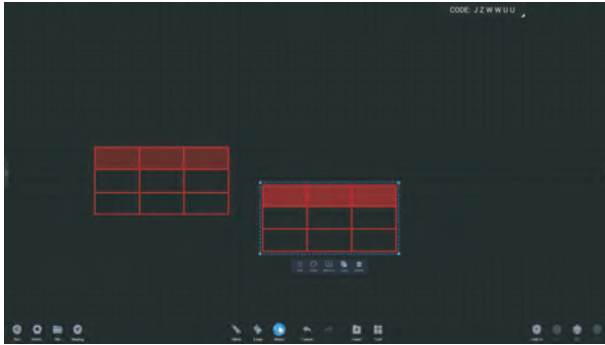 
Click the icon  to change the color of the table border, and select the color that can be customized .

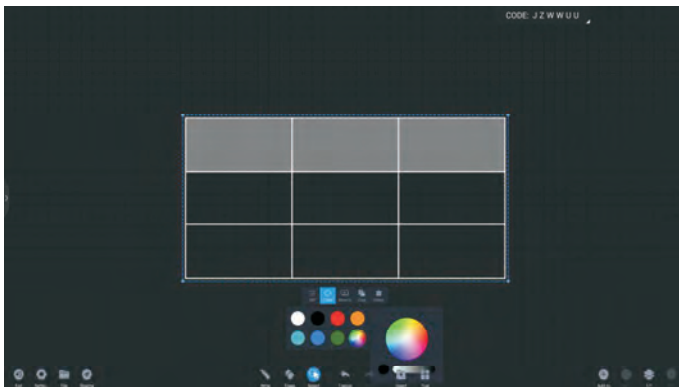




Click the icon  to move the form to another page

 


Click the icon  to copy and paste the form on the current page




Click the icon  to delete the current table.
b. Graphic


Click the icon  to insert the standard graphics, touch and drag the four corners to select the size, and touch and drag  to rotate the graphics

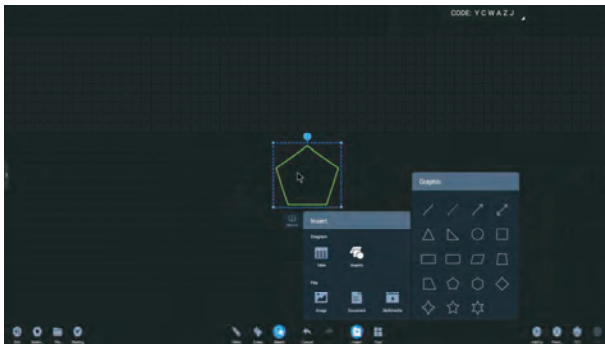

 c. Image



 
Click the icon  to enter the file browse box, select the corresponding image file and click twice to add it to the whiteboard page for editing

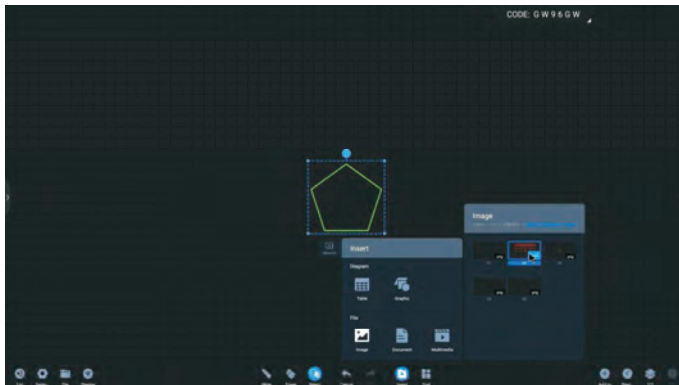


Click `Folder > user > 自定义库 > 工程3-5-202008-11-001` to return to the upper directory.

 d. Document



 Click the icon  to enter the file browse box. Select the appropriate document to open it on the page. For details, please refer to the insert image.

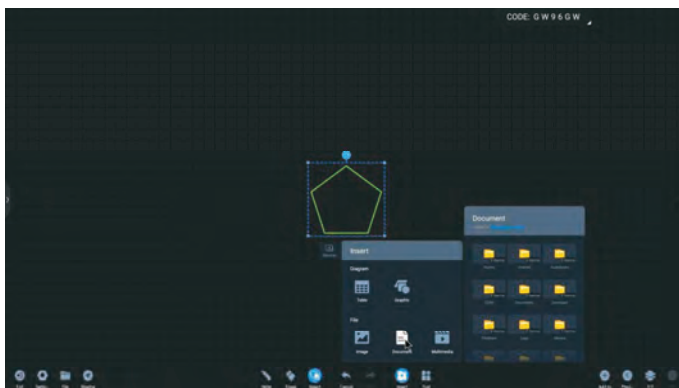


e. Multimedia




Click the icon **Multimedia** to enter the file browse box, and select the appropriate file to insert the picture in the page.



 Tool description: Click the icon **Tool** to call up the toolbar

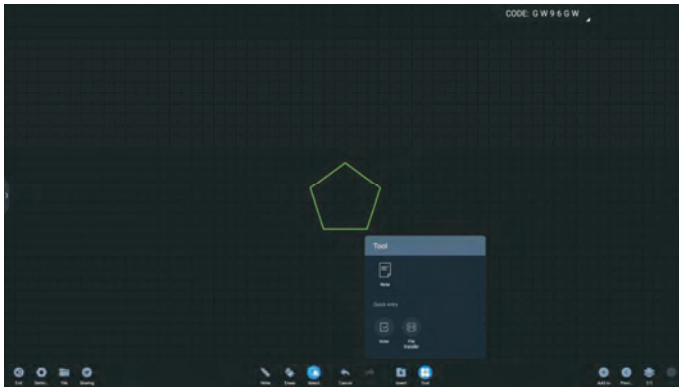

 - a. Click the icon **Note** to pop up the note editing box. You can turn on scanning code to generate notes. This function will generate QR code in the upper right corner of the screen, and users can scan code to generate notes.

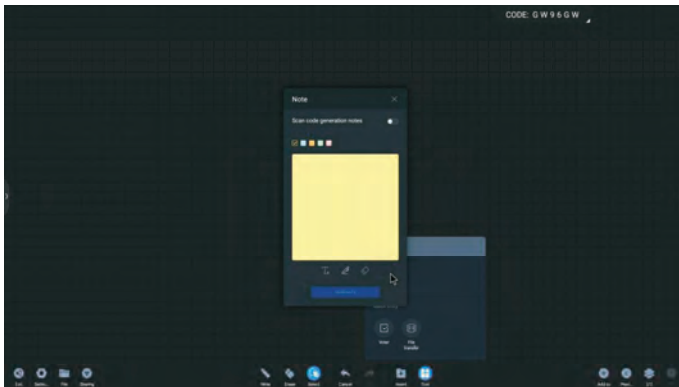



Set the background color of the note by checking the icon **[Color Selection]**.





Click the icon **T** to insert the text box, and input the content through the soft

 
keyboard

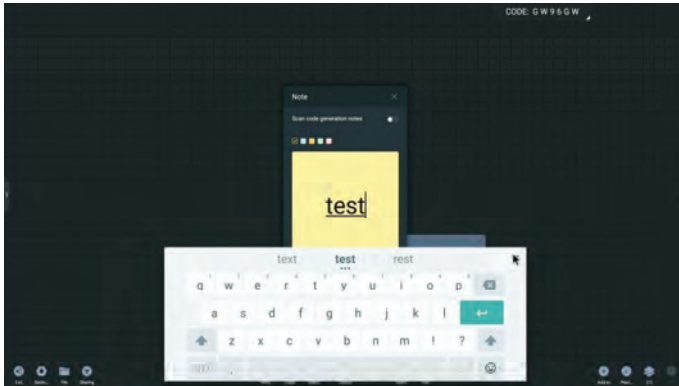

 
Click the icon  to enter the paintbrush function to paint the note.

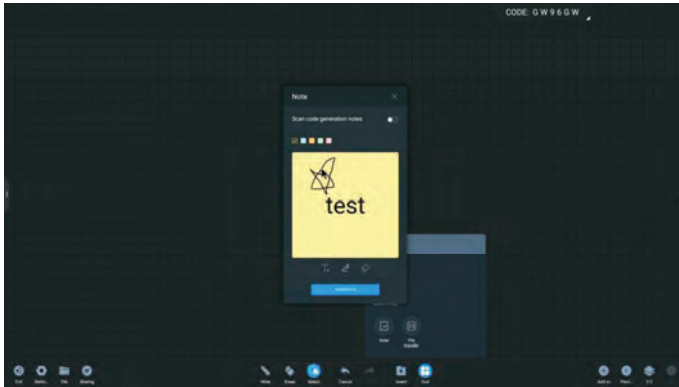


 
Click the icon  to enter the erase function, and touch to erase the painted content.

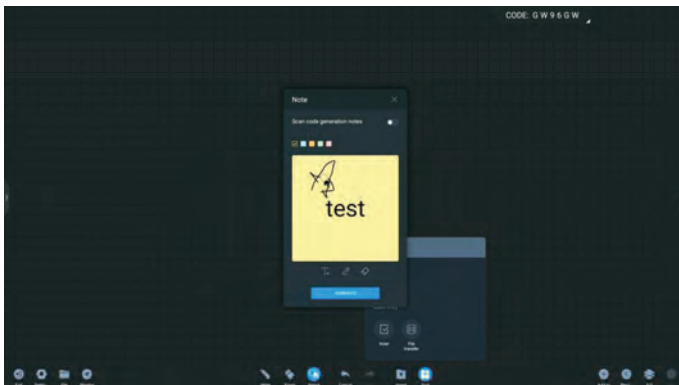


Click “generate” to generate notes.

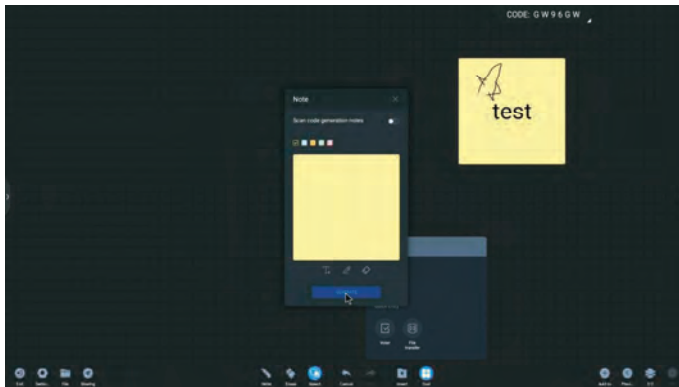   
 
 
 



- b. Click the icon  to pop up the voter setting box. View previous chapter.

- c. Click the icon  to open the file fast transfer tool, which will generate a QR code for users to scan and upload files.

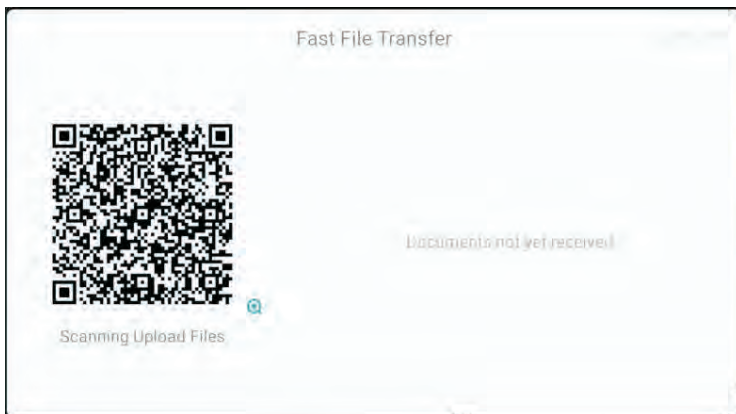

(2) Page operation instructions:

 
- a. Click the icon  to add a new page and switch the current page to a new page.
- b. When there are multiple pages, you can click  and  icon to switch pages.
- c. Click  to view all page thumbnails. You can switch or delete a page thumbnail.

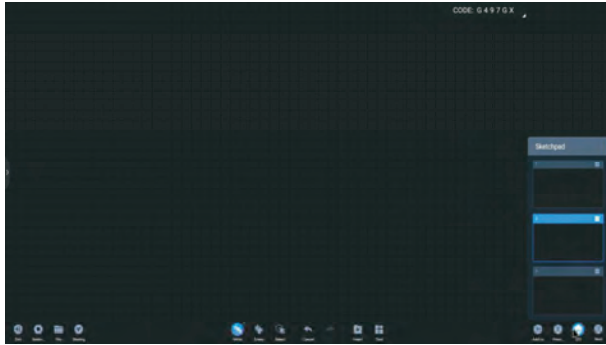


2.1.5 file

(1) open、save file

 
Click the icon  in the lower left corner to call up the file operation bar.

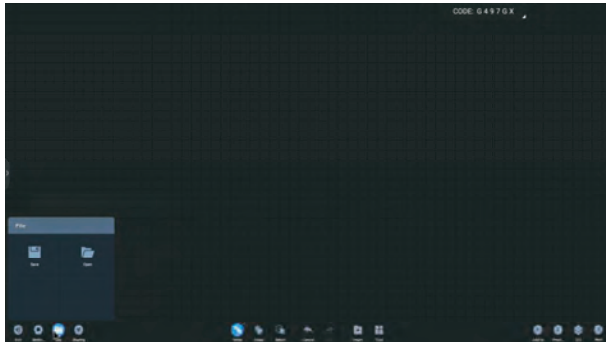

 a. Save:

Click the icon  to call up the save selection bar, choose to save to local or cloud disk (cloud disk needs to log in to cloud disk account in advance), save the name (default time naming), save the file format in MHB, PDF, PNG format, and attachment information.

 
Click "save" to save, and you will be prompted to save the path successfully.

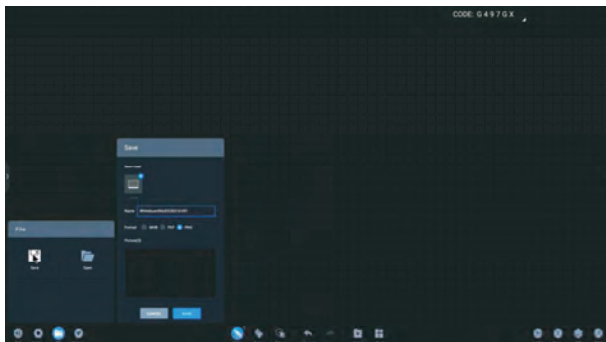

b. Open:



 
Click the icon to open the file browse box. Click twice to select the appropriate file to open it.

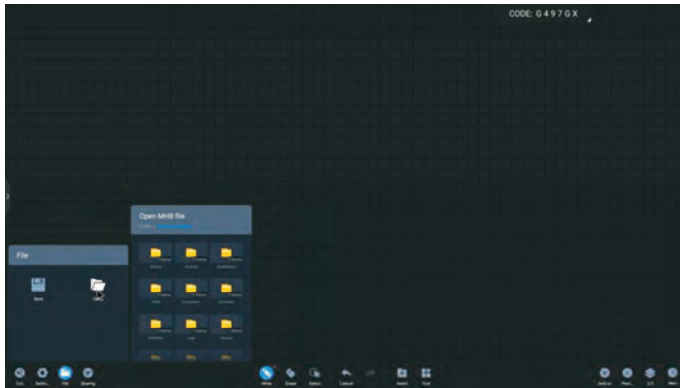

(3) sharing:



 
Click the icon to generate the file QR code (which needs to be used online). The user can scan the code to view it and also set the file encryption.

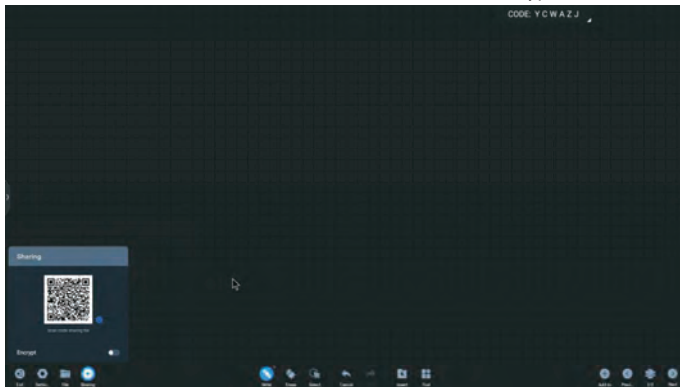

(4) exit:




 Click the icon to exit the whiteboard application. If there is unsaved content, you will be prompted whether to save and leave.

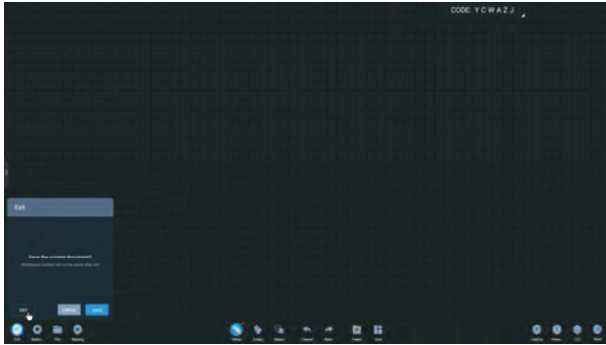



2.1.6 Small blackboard

 
This is a simple whiteboard, which can be called out by sliding up anywhere on the bottom edge

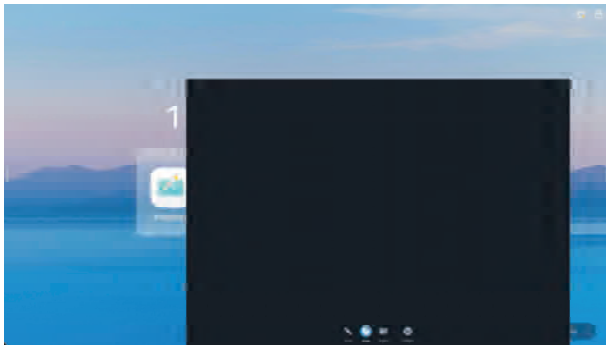


 
(1) After entering the small blackboard, the default is writing mode. When switching

 
back to writing mode from other modes, you can click the icon  to switch to writing mode, and click again to set the brush color. Three colors are available.

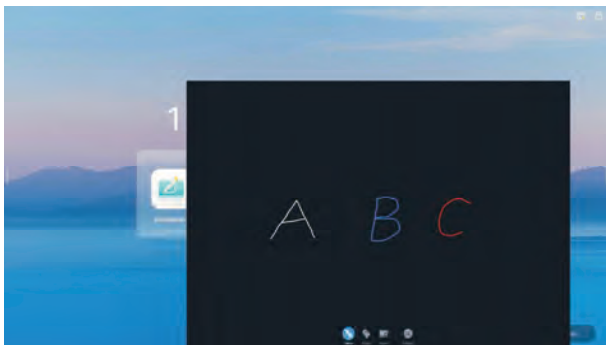

 
(2) Click the icon  to enter the erase mode, touch and drag to erase the written content of the overlapped part, and click again to call up the slide screen clearing

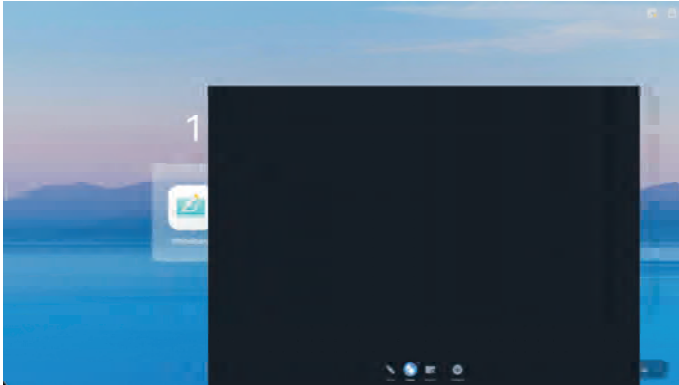

 (3) Click the icon  to start the whiteboard application and copy the writing content of the current small blackboard to the whiteboard.

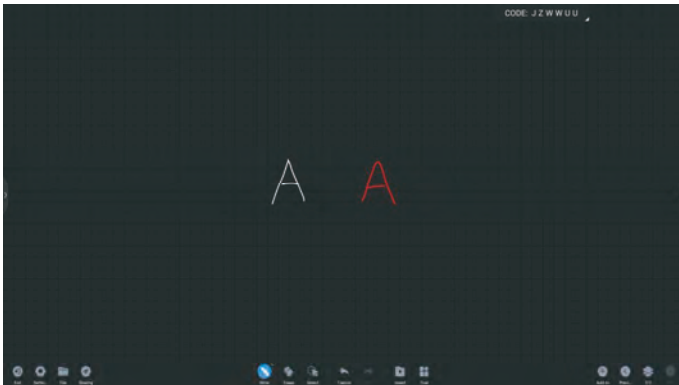

After exiting the whiteboard, the contents of the small blackboard are still retained.

 
(4) Click the icon  to put the small blackboard away, and the written content will remain until the power is cut off. Next time, call the small blackboard to continue writing.

2.2 finder

2.2.1 Interface Introduction




Click the icon to enter the file browsing application. The left side of the file browser displays local files and cloud hard disks.

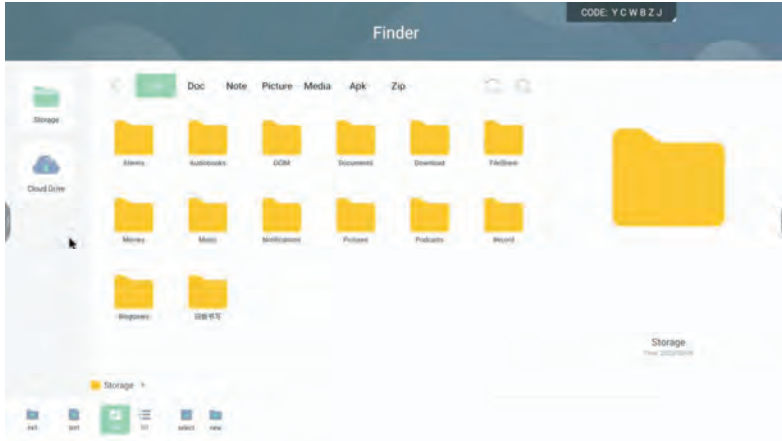

2.2.2 display mode

(1) classify:

 
The above column  Doc Note Picture Media Apk Zip can display the contents of the current directory by format.

- When you click "Doc", the main contents displayed are: Word, Excel, PDF, TXT files;
- When clicking "Note", ENB or JPG files will be displayed;
- When you click "Picture", the image format file will be displayed, such as PNG, JPG, etc;
- When clicking "Media", the audio (MP3) video (MP4) format file will be displayed;
- Click "Apk" to display application files, such as APP, APK, etc;
- When you click "Zip", the files of the compression package class will be displayed.


(2) sort:





Click the icon to sort files by name, type, size and time.

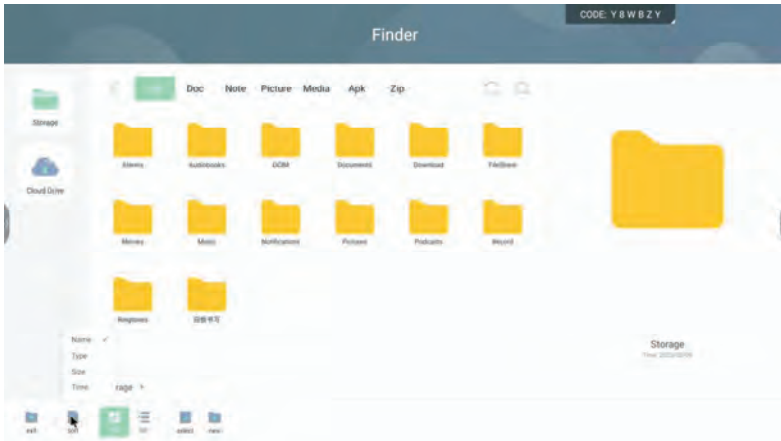


(3) display form:

Click the icon  grid to display the file in grid tiles;

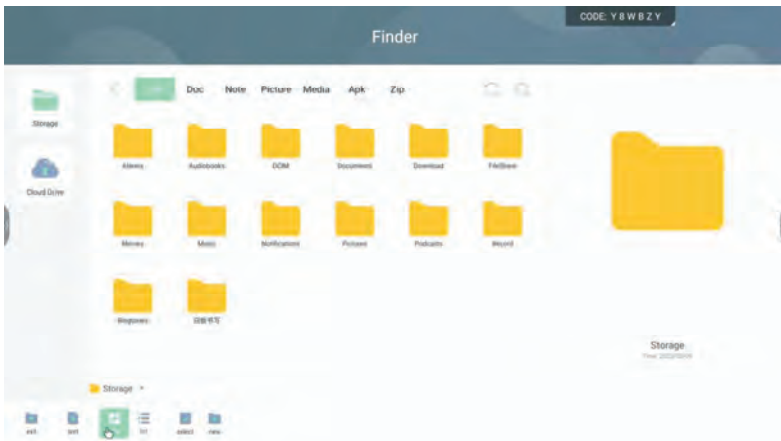 


Click the icon  list to display the file in a list.

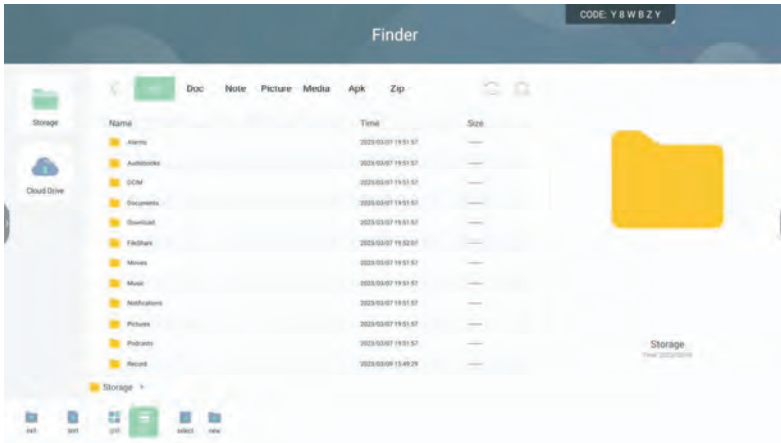 


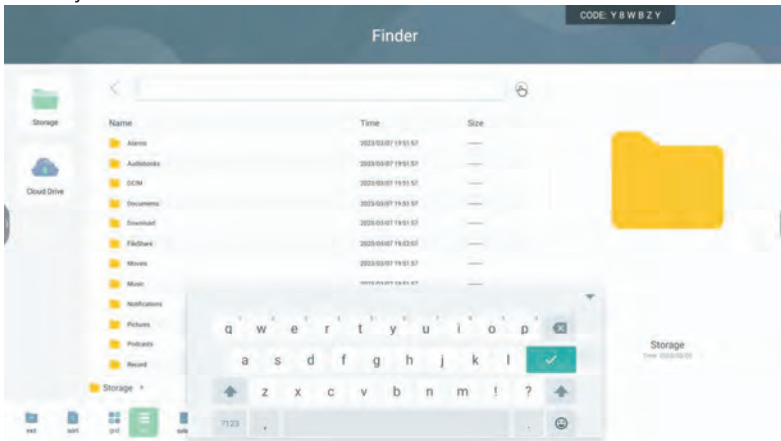 
2.2.3 toolbar

(1) renovate:

Click the icon  to refresh the file content.

 
(2) search:

Click the icon  to enter the file name to search the file in the current directory.




(3) new:

Click the icon  new to create a new folder.

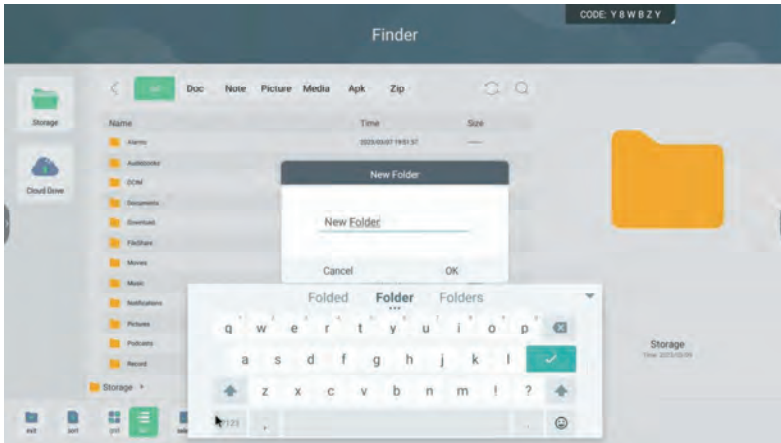



(4) exit:

 
Click icon  exit to exit file browsing.





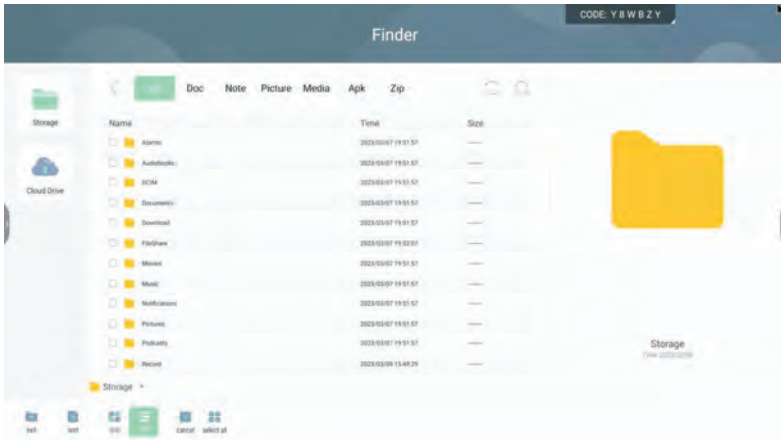

2.2.4 select

Click the icon  select to perform file operation on the file.



a. Click the box at the top right corner of the folder  to select the file

 
b. Click the icon  select all to select all the current directory files.

- c. Click the icon  to deselect the selected content
- d. Click the icon  to copy the selected file to the pasteboard
- e. Click the icon  to cut the selected file to the pasteboard
- f. Click  to paste the contents of the pasteboard into the current directory
- g. Click the icon  to delete the selected file contents
- h. Click the icon  to rename the selected file (only one can be selected at a time)

2.3 welcome

2.3.1 display

 
Click icon  (left or right) → click icon  → click icon , enter welcome application.

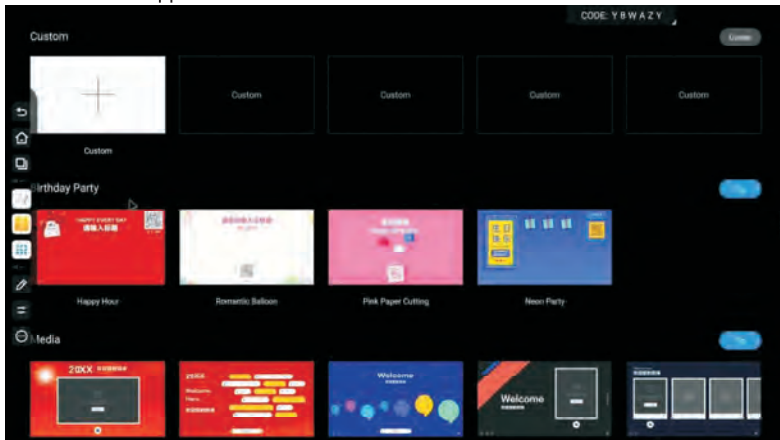


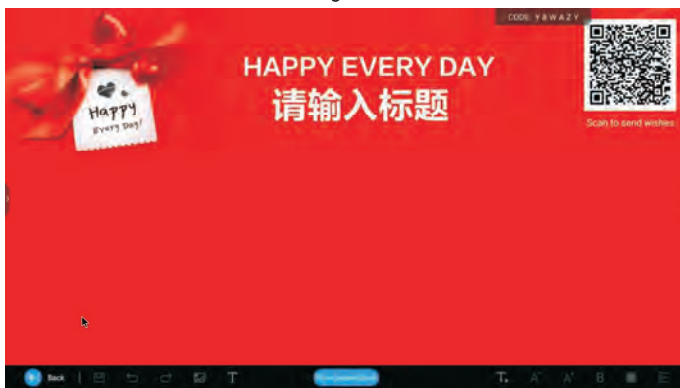 
The main interface is divided into custom, birthday party, media and text.


2.3.2 function introduction

 
Preview and open the template image in the main interface for editing:

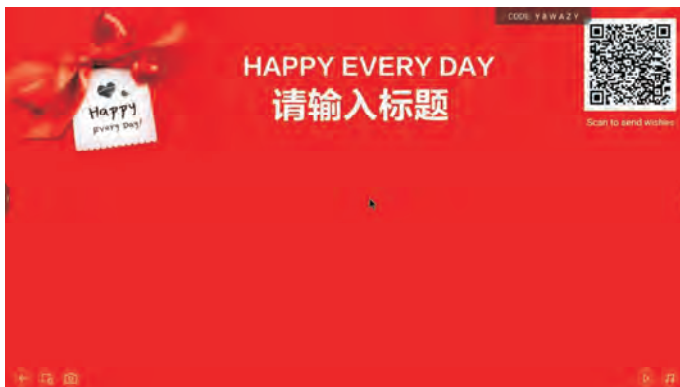


- (1) Click the icon  to enter editing mode




- a. Click the icon  to set the background image, which can be uploaded locally

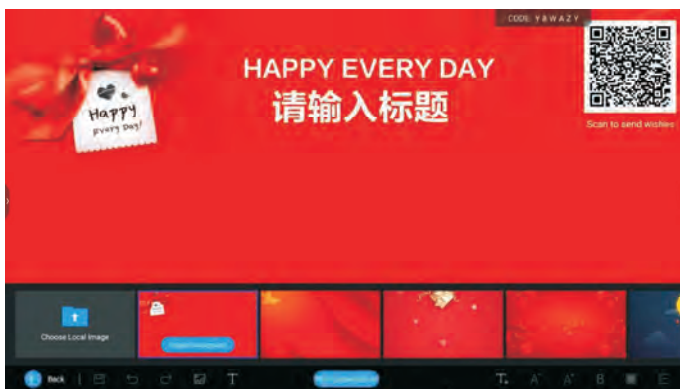

 - b. Click the icon **T** to set the text template. You cannot customize the text template, but you can add text.

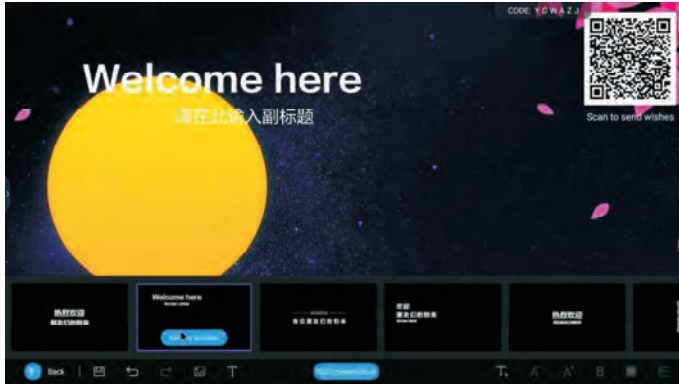

  
- c. Click the icon **T+** to edit the text and customize the text content.

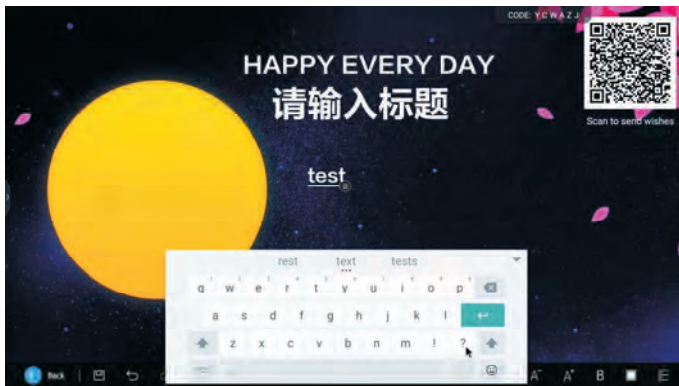







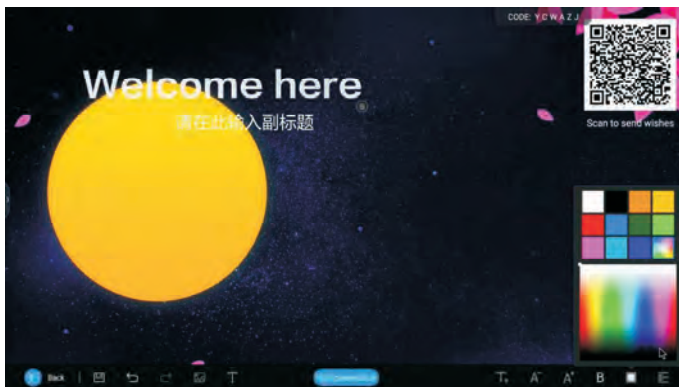


- d. Click icon **A⁻** and icon **A⁺** to enlarge or reduce the text font edited in the previous step.

- e. Click the icon **B** to bold the edited text content.

- f. Click the icon **□** to customize the color of the edited text



 - g. Click the icon  to align the edited text to the left, right and center.
 - h. Click icon  and icon  to undo and restore the unsaved operation.
 - i. Click the icon  to save the template theme.
 - j. Click icon  to exit topic editing and return to template.
- (2) Click the icon  to take photos. You need an idle camera.
 - (3) Click the icon  to automatically play the slide
 - (4) Click the icon  to play music and upload up to 3 music locally.

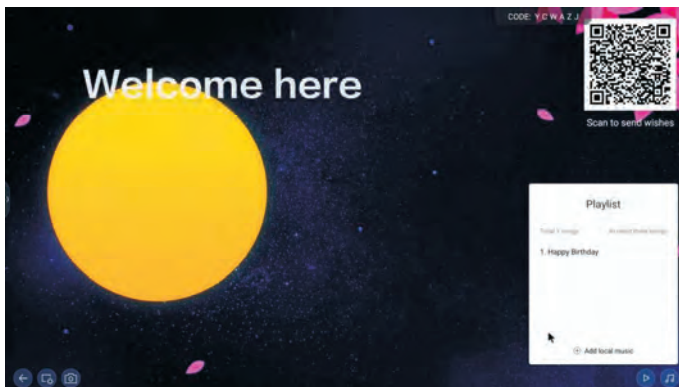

2.4 browser



Click the main interface icon  to enter the browser application.



2.5 keeper

Click icon  (left or right) → click icon  → click icon



 
enter keeper application.



(1) Click the home icon
as



(2) Click the application icon to display as

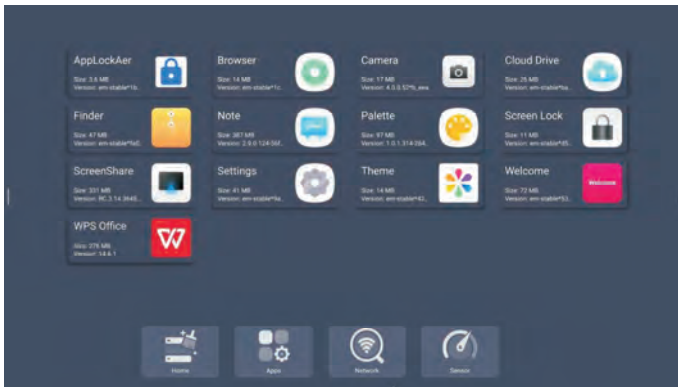


Click the icon to view the version information.

(3) Click to automatically clean up useless files.



 (4) Optimize memory and clean up garbage with one click.

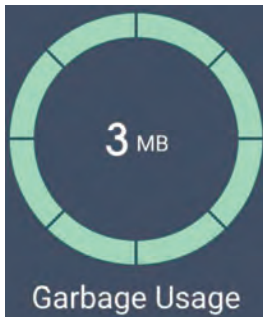


(5) Click on the network icon to view the network status and then click on the network



Click network speed measurement again to display the current network fluctuation



 (6) Click the sensor will be displayed as follows, if there is a sensor device can be opened

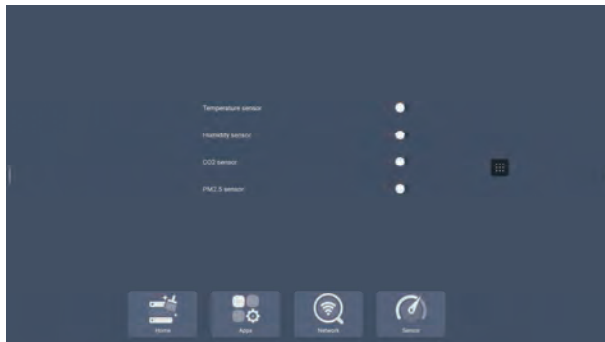

2.6 screen share

 
2.6.1 function introduction

The main function of the application is to project the contents of mobile phones, tablets or computers onto the conference all-in-one machine through wireless transmission, and truly realize the wireless screen transmission function of the projection device and the projected device (note: mobile phones, tablets or computers need to be in the same LAN as the conference tablet).

2.6.2 Operation Introduction



Click the main interface icon to enter the application main interface.

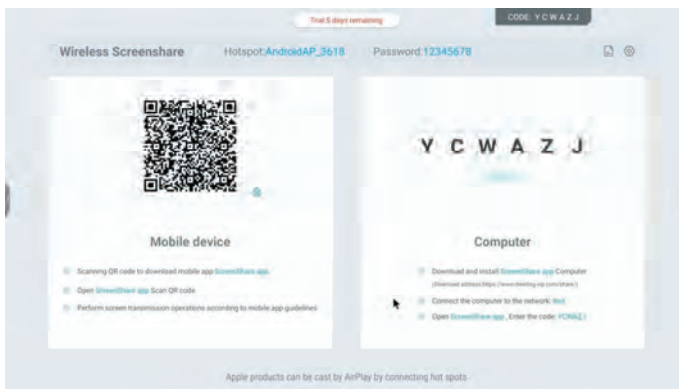

Operating instructions:


a. After the mobile phone or tablet is connected, scan the code to download the client and install it. (The IOS system does not need to install the client); The computer downloads and installs the screen transfer assistant client according to the download address.

b. After installation, the device and the all-in-one machine use the same network.

The screen can be cast by opening the screen transfer assistant of Android mobile phone to scan the QR code. The screen can also be transferred by opening the AirPlay connection device of Apple mobile phone. The screen can also be successfully transferred by entering the screen transfer code of the computer.


2.6.3 file sharing

Click the icon  to enter the file sharing interface, share the file to the

connected device, and click the icon  to upload the local file.






2.6.4 settings


Click the icon  to expand the setting box, which can open and close the screen code display, device visibility, intelligent full-screen function, and also can conduct problem feedback and view about the application.



2.7 cloud driver

Click icon  (left or right) → click icon  → click icon  enter cloud driver application. First, it will show that the cloud disk has been added. If there is no cloud disk, you can add a cloud disk account.





Click the icon  to add a cloud disk account, and you will be prompted to select the cloud disk type.



Select the appropriate type and enter the account password to verify login.

2.8 theme

Click icon  (left or right) → click icon  Click subject, enter theme application



Click the theme thumbnail to view the large image.

Click "choose" to set it as a theme.

2.9 Drawing board

Added artboard application

